

| ACTIVITY | Dozing Operation       |          |    | SITE      | SMC     | DEPARTMENT   | Mining |
|----------|------------------------|----------|----|-----------|---------|--------------|--------|
| SOP NO.  | IMFA/SOP/SMC/MINING/11 | REVISION | 00 | EFF DATE: | 19.6.14 | NO. OF PAGES | Page 1 |

| Step<br>No. | Activity (WHAT)    | Associated<br>Requirements/ Hazards/<br>Impact                | Process / tools / PPEs (HOW)  | Responsibility<br>(WHO)    | Remarks /<br>Reference   |
|-------------|--------------------|---|---|----------------------------|--------------------------|
| 1           | Pre-start checking | OH&S –<br>i)Fall from ladder                                  | i)Check ladders, steps, hand holds for loose bolts, break, cracks or missing parts etc.   | Dozer Operator             | DOCNO.<br>HIRA/MINING/11 |
|             |                    | ii)Fall from machine  | ii)During climbing keep both hands free and select firm footing.  | Dozer Operator             |                          |
|             |                    | iii)Clothing caught by<br>control levers/other                | iii)Do not wear loose clothing.   | Dozer Operator             |                          |
|             |                    | projections<br>iv)Slip  | iv)Check engine compartment for dirt, debris, oil<br>rags and tools etc. Always keep steps and<br>boots free of mud, grease and oil.  | Dozer Operator             |                          |
|             |                    | v)Fall from machine   | v)Ensure the status of roll over protective structure.  | Dozer<br>Operator/Mechanic |                          |
|             |                    | vi)Fall from machine  | vi)Make sure that seat belts are provided and in good working condition.  | Dozer Operator             |                          |
|             |                    | vii)Poor visibility   | vii)Clean windows and mirrors and adjust mirrors if necessary.  | Dozer Operator             |                          |
|             |                    | Environment -Nil  |   |                            |                          |
|             |                    | Quality –<br>i)Checking of the<br>equipment & safety fittings | <ul> <li>i)Check the following before starting the machine:</li> <li>a) Surroundings of dozer</li> <li>b) Fire extinguisher</li> <li>c)Hydraulic oil level</li> <li>d)Transmission oil level ( should be between</li> </ul> | Dozer Operator             | DOC.NO.<br>WI/OPRN/11    |



| ACTIVITY | Dozing Operation       |          |    |           | SMC     | DEPARTMENT   | Mining |
|----------|------------------------|----------|----|-----------|---------|--------------|--------|
| SOP NO.  | IMFA/SOP/SMC/MINING/11 | REVISION | 00 | EFF DATE: | 19.6.14 | NO. OF PAGES | Page 2 |

|   |                   | ii)The persons who is duly<br>authorised can operate<br>dozer.          | high & low)<br>e)Engine oil (should be between high & low)<br>f) Water in the radiator .<br>g)Diesel in the diesel tank<br>h)Loose & damaged parts<br>i)Condition of blade and cutting edge.<br>ii)Do not allow any other person to ride or<br>operate the dozer.<br>iii)Check the fittings of AFDS system | Shift Incharge/ Dozer<br>Operator |                          |
|---|-------------------|---|--|-----------------------------------|--------------------------|
| 2 | Starting of dozer | OH&S –<br>i)Striking the person   | i)Check the controls and be sure that they are<br>in neutral and blade is lowered to ground.<br>Sound horn before starting or moving.  | Dozer Operator                    | DOCNO.<br>HIRA/MINING/11 |
|   |                   | Environment –<br>i)Contamination of soil due<br>to oil leakage or smoke | i)Check for no oil leakages  | Dozer Operator/<br>Mechanic       | Aspect No.16             |
|   |                   | ii)Vehicular emission   | ii)Check for no black or white smoke.  |                                   | Aspect No.12             |
|   |                   | Quality –<br>i)Check after starting of<br>dozer                         | i)Check every warning devices,lights, indicators<br>and other safety features incorporated in the<br>machine.  | Dozer Operator                    | DOC.NO.<br>WI/OPRN/11    |
|   |                   | ii)Run the engine at low<br>idle  | ii)Run engine at low idle until it reaches normal operating temperature and check gauges and warning lights again for normal readings.   | Dozer Operator                    |                          |
|   |                   | iii).Check brake,steering and transmission                              | iii)Check brakes and steering after moving a<br>short distance and also check transmission<br>operation. If any defect is found switch off the<br>machine and inform the supervisor.   | Dozer Operator                    |                          |



| ACTIVITY | Dozing Operation                   |  |           | SITE    | SMC          | DEPARTMENT | Mining |
|----------|------------------------------------|--|-----------|---------|--------------|------------|--------|
| SOP NO.  | IMFA/SOP/SMC/MINING/11 REVISION 00 |  | EFF DATE: | 19.6.14 | NO. OF PAGES | Page 3     |        |

| 3 | Tram dozer to work area | OH&S-<br>i)Striking people/ toppling<br>of the equipment<br>iiRun over the edge | <ul> <li>i)Do not reverse the dozer unless you have a clear view of the area behind it.</li> <li>ii)Do not drive the dozer unless you have clear view of minimum 30 meter ahead of it.</li> </ul>                                       | Dozer Operator<br>Dozer Operator | DOCNO.<br>HIRA/MINING/11 |
|---|-------------------------|---|---|----------------------------------|--------------------------|
|   |                         | iii)Striking people   | iii)Do not over speed during reversing.   | Dozer Operator                   |                          |
|   |                         | Environment - Nil   |   |                                  |                          |
|   |                         | Quality –<br>i)Marching   | i-a)Buckle up seat belt always during operating<br>b)Observe travel area, adjust speed for<br>conditions and tram with blade low 15 to 20<br>inches off the ground.<br>c)Do not march the dozer more than the<br>specified speed limit. | Dozer Operator                   | DOC.NO.<br>WI/OPRN/11    |
| 4 | Examine the work area   | OH&S –<br>i)Toppling  | i)Check the work area for loose rock, cracks, slopes etc.   | Dozer Operator                   | DOCNO.<br>HIRA/MINING/11 |
|   |                         | ii)StrIking by moving<br>equipment  | ii)Observe the area for other equipment. If<br>leaving dozer, lower the blade, set brakes and<br>shut -off the engine.  | Dozer Operator                   |                          |



| ACTIVITY | Dozing Operation                   |  |  | SITE      | SMC     | DEPARTMENT   | Mining |
|----------|------------------------------------|--|--|-----------|---------|--------------|--------|
| SOP NO.  | IMFA/SOP/SMC/MINING/11 REVISION 00 |  |  | EFF DATE: | 19.6.14 | NO. OF PAGES | Page 4 |

|   |               | Environment - Nil  |  |                |                          |
|---|---------------|--|--|----------------|--------------------------|
|   |               | Quality – Nil  |  |                |                          |
| 5 | Push material | OH&S –<br>i)Fall from dozer                                      | i)Keep doors closed and securely latched<br>during operation.  | Dozer Operator | DOCNO.<br>HIRA/MINING/11 |
|   |               | ii)Equipment sliding/<br>Ground failure under<br>weight of dozer | ii)Be alert for ground conditions. Steep slopes,<br>cut out areas result in weak areas that may not<br>support the weight of dozer.  | Dozer Operator |                          |
|   |               | iii)Skidding or sliding  | iii)Use extra caution, if clearing in rain or other conditions that could reduce traction-   | Dozer Operator |                          |
|   |               |  | <ul> <li>a)Be aware of limited sight distance in fog,dust<br/>and rain and operate at lower speeds to allow<br/>quicker stops etc.</li> <li>b)Operate in gear consistent with material.<br/>Reduce load that is being pushed and operate<br/>in direction that will provide most traction and<br/>best braking surface.</li> </ul> |                |                          |
|   |               |  | iv)Be aware of the equipment operating in the area. Keep lights and back up horns in operating condition.  | Dozer Operator |                          |
|   |               | iv)Striking other equipment or persons                           | v)Leave berms along edges of slopes for safe unloading of dumper.  | Dozer Operator |                          |
|   |               | v)Leaving barrier to restrict the dumper going to edge           | vi)Do not forward the dozers blade beyond the edge. Operate the dozer at a safe distance from the edge.  | Dozer Operator |                          |
|   |               | vi)Toppling of dozer at the edge                                 |  |                |                          |



# STANDARD OPERATING PROCEDURE

FORM NO.HSE/CORP/4

| ACTIVITY | Dozing Operation       |          |    |           | SMC     | DEPARTMENT   | Mining |
|----------|------------------------|----------|----|-----------|---------|--------------|--------|
| SOP NO.  | IMFA/SOP/SMC/MINING/11 | REVISION | 00 | EFF DATE: | 19.6.14 | NO. OF PAGES | Page 5 |

|   |         | Environment - Nil                          |  |                               |                          |
|---|---------|--|--|-------------------------------|--------------------------|
|   |         | Quality-<br>i)Make barrier at the edge     | i)Make the barrier to a height of not less than<br>the diameter of the tyre of largest dumper<br>plying in that road. Keep sufficient material with<br>the bade end then push the boulders or<br>material.                                     | Dozer<br>Operator/Mining Mate | DOC.NO.<br>WI/OPRN/11    |
|   |         | ii)Check during operation                  | ii)Avoid over heating of brakes. During<br>operation maintain dozer stability and avoid<br>turning side ways. Frequently check gauges to<br>be sure fluid pressures are adequate,<br>preventing engine shut down and transmission<br>shifting. | Dozer Operator                |                          |
|   |         | iii)Be cautious during work                | iii)Concentrate on work at all times and do not take chances.  | Dozer Operator                |                          |
|   |         | iv)Estimate your control                   | iv)Do not over estimate the capability of dozer.   | Dozer Operator                |                          |
| 6 | Parking | OH&S –<br>i)Striking by other<br>equipment | i)Park only at parking areas and always set<br>brakes. Avoid parking on gradient or haul roads.<br>if parking on a haul road is required pick the  | Dozer Operator                | DOCNO.<br>HIRA/MINING/11 |




### STANDARD OPERATING PROCEDURE RP/4

| FORM NO.HSE/CORP/ | 4 |
|-------------------|---|
|-------------------|---|

| ACTIVITY | Dozing Operation       | Dozing Operation |    |           | SMC     | DEPARTMENT   | Mining |
|----------|------------------------|------------------|----|-----------|---------|--------------|--------|
| SOP NO.  | IMFA/SOP/SMC/MINING/11 | REVISION         | 00 | EFF DATE: | 19.6.14 | NO. OF PAGES | Page 6 |

|                           |                                      | safest place.  |   |   |
|---------------------------|--------------------------------------|--|---|---|
|                           |                                      |  |   |   |
|                           |                                      |  |   |   |
|                           |                                      |  |   |   |
|                           |                                      |  |   |   |
|                           |                                      |  |   |   |
|                           |                                      |  |   |   |
|                           |                                      |  |   |   |
|                           | Environment – Nil                    |  |   |   |
|                           |                                      |  |   |   |
|                           | Ouality –                            |  |   |   |
|                           | i)Stopping and switching             | i)When not in use move out the machine from<br>face, lower the blade & keep in a level ground.<br>Keep idle for a few minutes & switch off ignition<br>key .Then close and lock the cabin. Cutoff<br>power from cutoff switch.                                   | Dozer Operator  | DOC.NO.<br>WI/OPRN/11   |
| 7 Maintain Shift Log-Book | OH&S - Nil                           |  |   |   |
|                           |                                      |  |   |   |
|                           |                                      |  |   |   |
|                           | Quality –<br>i)Recording in log book | i)At shift end, fill the Log sheet and hand over<br>to shift incharge so that the operator of next<br>shift will know about the status of the machine.<br>(Mention if there is any leakages,<br>malfunctioning / absence of any safety devices<br>in dozer etc.) | Dozer Operator  | DOC.NO.<br>WI/OPRN/11   |
|                           | Maintain Shift Log-Book              | Quality –         i)Stopping and switching         Maintain Shift Log-Book         OH&S – Nil         Environment - Nil         Quality –  | Environment – Nil         Quality –         i)Stopping and switching         i)Stopping and switching         i)Stopping and switching         i)When not in use move out the machine from face, lower the blade & keep in a level ground. Keep idle for a few minutes & switch off ignition key .Then close and lock the cabin. Cutoff power from cutoff switch.         Maintain Shift Log-Book       OH&S – Nil         Quality –       i)At shift end, fill the Log sheet and hand over to shift incharge so that the operator of next shift will know about the status of the machine. (Mention if there is any leakages, (Mention if there is any leakages) | Maintain Shift Log-Book       OH&S – Nil       Image: Signal Shift Log-Book       Dozer Operator         Maintain Shift Log-Book       OH&S – Nil       Image: Signal Shift Log-Book       Dozer Operator         Maintain Shift Log-Book       OH&S – Nil       Image: Signal Shift Log-Book       Dozer Operator         Maintain Shift Log-Book       OH&S – Nil       Image: Signal Shift Log-Book       Dozer Operator         Maintain Shift Log-Book       OH&S – Nil       Image: Signal Shift Log-Book       Image: Signal Shift Log-Book       Dozer Operator |

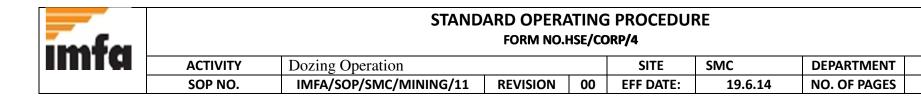

|  | Prepared by                  | Approved by               |  |
|--|------------------------------|---------------------------|--|
| Name<br>Designation<br>Signature:<br>Date: | M.K. Samal<br>Manager(Mines) | S. Patni<br>Sr. GM(Mines) |  |

Mining

Page 7

### NOTE :

### **SIX DIRECTIONAL HAZARD IDENTIFICATION DURING JOB :**

In addition to the above SOP, a 6-directional hazard identification sheet shall be used before start of the job. While executing the job at site, any hazards from six directions (**NORTH, SOUTH, EAST, WEST, TOP, BUTTOM**) to be assessed based on physical observation, common sense & experience. Controls shall be taken for any hazards thus identified.

#### **TRAINING RECORD OF SOP:**

The Training on this SOP with six directional hazards is to be imparted to concerned employee and contract workers by Shift In-Charge / Deptt. Head as applicable. The Training Record to be maintained in a register with signature of the individual employees before starting of the job.